



FSC Product Safety Manual

RadICS

(Radiy FSC — FPGA-based Safety Controller)

Document D11.1

Version V3, Revision R4

January 2018

Table of Contents

1	Introduction.....	6
1.1	Scope and Purpose of this Document	6
1.2	Applicability and Version Information	6
1.3	Reference Standards	7
1.4	Other Documents Referenced by this Product Safety Manual	7
1.5	Specific Definitions and Acronyms	8
1.6	Other Definitions and Acronyms.....	9
2	Certification.....	10
3	Management of Functional Safety with the FSC	12
4	Failure Rate Data for Application Selection and SIL Verification.....	14
4.1	Defined Safe State	14
4.2	Failure Rate Data	15
4.3	Time Domain Data	19
4.4	Using the Failure Rate Data for a Specific SIF	19
4.5	Low Demand Mode of Operation.....	21
4.5.1	Criteria for Low Demand Mode	21
4.5.2	General Requirements for Low Demand Mode.....	21
4.5.3	Proof Test Coverage (PTC) Considerations.....	22
4.5.4	Recommended Proof Test Procedures	23
4.6	High Demand Mode of Operation.....	27
4.7	Common Cause Failure Considerations.....	28
4.8	Operating Limits	28
4.8.1	Product Life.....	28
4.8.2	Environmental Conditions	29
4.8.3	EMI and Surge Withstand Ratings	29
4.8.4	Signal Ranges and Voltage & Current Limits	31
5	Operation.....	34
5.1	Theory of Operation	34
5.1.1	General	34
5.1.2	FSC Modes of Operation	37
5.2	Local Indications of FSC Modes and Status.....	40
5.3	Safety OverOverride (SOR).....	41
5.4	Response to Detected Failures	42
5.4.1	Concept.....	42
5.4.2	Automatic Response of the FSC	43
5.4.3	User Application Logic (UAL) Decisions.....	44
6	Wiring of Inputs and Outputs	44
6.1	FSC Physical Chassis: Use of Modules and Chassis Slots	44
6.2	Module I/O Capacities	45
6.3	Redundancy Options	47
6.4	EMI/Surge Protection Filters for I/O.....	48
6.5	Chassis Connectors	48
6.6	Power Supply Wiring	49
6.7	I/O Wiring	50
6.7.1	Wiring of SOR Inputs	51
6.7.2	Wiring of Logic Module.....	52
6.7.3	Wiring of AIM Analog Inputs.....	54
6.7.4	Wiring of DIM Discrete Inputs	56
6.7.5	Wiring of DOM Discrete Outputs	57
6.7.6	Wiring of AOM Analog Outputs	58

6.7.7	Wiring of AIFM Analog Inputs	60
6.7.8	Wiring of OCM Fiber Opto transceivers and RS-232/485 Outputs* ...	61
6.7.9	Wiring of chassis fans control and diagnostic	61
6.8	Wiring to Accommodate Periodic Proof Tests and Logic Changes	61
6.9	Wiring for the Safety OverRide (SOR).....	63
6.10	Detection of Field Faults in Input Circuits	64
6.10.1	AIM Failed Analog Transmitters or Wiring.....	64
6.10.2	Detecting Shorted Field Wiring	66
6.10.3	AIFM Failed Analog Transmitters or Wiring	67
6.11	Wiring for the ‘Armed’ Contact for Tuning and Testing.....	68
7	Installation.....	68
7.1	Installation of the FSC chassis	68
7.2	Installation of FSC Modules.....	69
7.3	Installation of EMI/Surge Protection Modules.....	72
7.4	Installation of LM Unique Address connector	74
7.5	Connections to the FSC	76
7.6	Authentication of the FSC Version	78
8	Maintenance, Calibration, Periodic Testing	78
8.1	FSC Module HMI	79
8.2	LED Indications on FSC Modules.....	79
8.3	4-Character Matrix Display on FSC Modules	79
8.3.1	Display Tiers	79
8.3.2	Temporary Display Values During Startup	81
8.3.3	Identifying Specific Failure Details Using the Display	83
8.3.4	Determining the Specific Fault with a Blank Display	83
8.4	Routine Maintenance Activities	83
8.4.1	Periodic Inspection.....	84
8.4.2	Proof Tests.....	85
8.4.3	Routine Maintenance	85
8.5	Maintenance in Response to Detected Failures	85
8.5.1	Overview Procedure.....	85
8.5.2	Detailed Diagnostic Procedure.....	86
8.6	Calibration	91
8.6.1	AIM Calibration	92
8.6.2	AOM Calibration.....	92
8.6.3	AIFM Calibration	93
8.7	Personnel Safety	93
8.8	Inspection and Test Records.....	94
8.9	General Maintenance Issues.....	94
8.10	UpLoad Station (ULS)	94
9	Tuning of Application Parameters	95
10	Design and Installation of Application Logic	95
10.1	User Application Logic Required for Compliance to IEC 61508	95
10.1.1	Verification of Chassis Configuration	96
10.1.2	Verification of I/O Channel Status	96
10.1.3	Mitigation of Failures of Safety-Critical I/O Channels	97
10.1.4	Allowances for Analog Signal Tolerance.....	98
10.1.5	Setting the SOR to Reach a Safe State	100
10.1.6	Latching Trip Decisions.....	101
10.1.7	Monitoring Module Temperature	101
10.1.8	User Logic Tests Required for the AIFM	101

10.1.9 Redundancy in User Wiring of I/O.....	102
10.1.10 UAL Requirements to Mitigate Output Module Failures	102
10.1.11 Behaviour of OCLs in RUN(SAFE) and FAULTED Modes.....	104
10.2 Use of RPCT to Design Application Logic	104
10.3 Installing a Logic Configuration in an FSC Logic Module	105
11 Security	107
11.1 Physical Security	107
11.2 Application Logic Configuration	107
11.3 Cyber Security.....	107
12 Product Forum.....	108
Annex A List of FSC modules fault codes	109
Annex B RadICS Platform Components List	110

Figures

Figure 1-1 Radiy FSC Chassis Partially Filled with I/O Modules	7
Figure 4-1 Illustration of the Impact of PTC < 100%	23
Figure 4-2 Illustration of the AIFM data processing path.....	26
Figure 5-1 Theory of Operation of the FSC	34
Figure 5-2 Timeline of FSC Operating Modes	37
Figure 6-1 FSC Chassis Slots	45
Figure 6-2 Time delays affecting inter-chassis SIFs in multi-chassis configurations.....	47
Figure 6-3 FSC Chassis Showing Location of Optional EMI Filters.....	48
Figure 6-4 Rear of FSC Chassis Showing Connectors.....	49
Figure 6-5 FSC Chassis Power Supply Connections	50
Figure 6-6 FSC I/O Slot Connector Pinout Designations	50
Figure 6-7 AIFM Slot Connector Pinout Designations.....	50
Figure 6-8 OCM Slot RS-232/485 Connector Pinout Designations	51
Figure 6-9 FSC Discrete I/O Pinout Polarities	53
Figure 6-10 FSC Analog I/O Pinout Polarities for Current.....	54
Figure 6-11 FSC Analog I/O Pinout Polarities for Voltage	55
Figure 6-12 Single DI pinout with “diagnostic” resistor.....	56
Figure 6-13 FSC Analog Output Pinout Polarities for Current.....	59
Figure 6-14 FSC Analog Output Pinout Polarities for Voltage	59
Figure 6-15 FSC Analog Input Pinout Polarities for Neutron detector connection	60
Figure 6-16 Wiring to Facilitate Proof-Testing and Tuning	62
Figure 6-17 Example of Wiring of SOR for Selected DOMs	64
Figure 6-18 Use of 225 Ω Input Resistor with Analog Inputs	65
Figure 6-19 Extrapolation in ‘Shoulder’ Regions with 225 Ω Input Resistor	66
Figure 6-20 Diagnostic Field Resistor Used to Detect Shorted Field Circuit	66
Figure 7-1 Installation of the FSC Chassis.....	68
Figure 7-2 Locking Brackets for Chassis Installation	69
Figure 7-3 Installing/Removing an FSC Module	70
Figure 7-4 The pegs in the bottom rail	71
Figure 7-5 The pegs for plug-in modules	71
Figure 7-6 The pegs in the bottom and top horizontal rail	72
Figure 7-7 Slots and rails for EMI/Surge Protection module.....	73
Figure 7-8 Installation EMI/Surge Protection module into the rails and slots	73
Figure 7-9 Installed EMI/Surge Protection module	74
Figure 7-10 Installed Connector with Pre-Installed Jumpers	75

Figure 7-11 Empty slot for Address Connector	76
Figure 7-12 Power Cable Connections.....	77
Figure 7-13 Connector XG2 with dust cap	77
Figure 8-1 FSC Module Local HMI.....	79
Figure 10-1 Monitorable Signals of FSC Modules	96
Figure 10-2 LM Input Ports to Set the SOR.....	100

Tables

Table 1-1 Reference standards	7
Table 1-2 Reference documents	7
Table 1-3 Time Domain Parameters	8
Table 1-4 Failure Modes	8
Table 1-5 Failure Rates	8
Table 1-6 Parameters Related to Proof Testing.....	8
Table 4-1 FSC Failure Rates at MSL (Relative Flux = 1).....	17
Table 4-2 FSC Failure Rates at Relative Flux = 10	18
Table 4-3 FSC Response Times	19
Table 4-4 Example: Calculating the PF of the FSC for a SIF – step 1	19
Table 4-5 Example: Calculating the PF of the FSC for a SIF – step 2	20
Table 4-6 FSC and Cabinet Environmental Limits	29
Table 4-7 EMI and Surge Withstand Ratings	29
Table 6-1 SOR Pinouts	51
Table 6-2 Logic Module I/O Pinouts	53
Table 6-3 Analog Input Module I/O Pinouts.....	55
Table 6-4 Discrete Input Module I/O Pinouts	56
Table 6-5 Discrete Output Module I/O Pinouts	57
Table 6-6 Analog Output Module I/O Pinouts	59
Table 6-7 Analog Input Pinouts for AIFM.....	60
Table 6-8 Pinouts for OCM RS-232/485 Outputs.....	61
Table 6-9 Fan Control Board I/O Pinouts	61
Table 8-1 Temporary Error Codes Optionally Displayed During Startup on I/O Modules.....	82
Table 8-2 Temporary Error Codes Optionally Displayed During Startup on the LM	82
Table 8-3 AOM Calibration Signal Levels	93