



НВП Радій
RPC Radiy

Project:

Radiy FPGA-based Safety Controller (FSC)

FSC Radiy Platform Configuration Tool User Manual (FSC RPCT UM)

D11.6

Kirovograd, Ukraine

2018

Contents

1	Introduction.....	11
1.1	Overview	11
1.2	Scope and Purpose of this Document	12
1.3	Applicability and Version Information.....	13
1.4	IEC 61508 Certification of the RadICS FSC.....	13
1.5	References	14
1.6	Product Documents Referenced by this User Manual.....	14
1.7	Definitions and Acronyms.....	15
2	Overview of RPCT and Related RadICS Systems.....	19
2.1	Brief Description of the RadICS FSC and Configuring It.....	19
2.1.1	FSC Chassis Hardware	19
2.1.2	Large Systems Involving Multiple FSC Chassis.....	20
2.1.3	Use of RPCT to Define a Hardware Configuration.....	21
2.1.4	Expansion of FSC Capacity.....	23
2.1.5	User Application Logic (UAL)	24
2.1.6	FSC I/O Modules and Connections to UAL.....	26
2.2	Brief Description of the Monitoring and Tuning System (MATS)	27
2.3	Overview of RPCT	29
2.3.1	Using RPCT to Define the FSC Systems	30
2.3.2	Using RPCT to Define the MATS Systems	32
2.3.3	Notation in this UM:.....	32
2.3.4	Bullets:.....	33
2.3.5	Terminology in this UM:.....	33
2.3.6	Platform Dependencies:.....	33
3	Installation and Setup of RPCT	35
3.1	System Requirements	35
3.1.1	Hardware and Operating System Requirements:	35
3.1.2	Software and Libraries Required.....	35
3.2	PostgreSQL Server Setup	35
3.3	Installation of RPCT on a Windows Platform.....	40
3.3.1	Initial Installation of RPCT	40
3.3.2	Subsequent Installations, Repairs, Removal of RPCT.....	41
3.3.3	Setup of RPCT-Server Connection	42
3.4	RPCT User Interface	44
3.5	Shortcuts	47
3.6	Multi-User Operation	48
4	Managing Application Projects.....	50
4.1	Creating a Project	51
4.2	Opening a Project for Viewing or Editing Project	52
4.3	Managing Incompatibility of RPCT and Database Versions	53
4.4	Closing an Open Project.....	54
4.5	Cloning a Project	55
4.6	Deleting a Project	56
4.7	Refreshing the Project List	57
4.8	Creating and Managing Project-Design Users	57
4.8.1	Creating or Disabling Users	58
4.8.2	Assignment of User Properties.....	60
4.9	User Property Changes by Design-Users	61

5	Equipment Configuration Concepts.....	62
5.1	Physical vs Logical Structure of a Project System.....	62
5.2	Structure of an Equipment Configuration	64
5.3	FSS Chassis Configurations	65
5.4	MATS and FSS-MATS Communications Configurations.....	66
5.4.1	Example of a Physical Structure:	68
5.5	Properties of the Various Objects.....	70
5.5.1	Common Properties.....	70
5.5.2	User-Adjustable Properties of All Object Types.....	73
5.5.3	Presets.....	76
6	Equipment Configuration Editor.....	80
6.1	Overview of Operations to Define an Equipment Configuration.....	80
6.2	Adding an Object or Preset to the Configuration Tree.....	83
6.2.1	Adding an Object or Preset: Step 1- Adding It	83
6.2.2	Adding an Object or Preset: Step 2- Setting Essential Properties.....	85
6.2.3	Setting the Place Property	86
6.2.4	Setting the EquipmentIDTemplate Property	86
6.3	Deleting an Object or Preset from the Configuration Tree.....	87
6.4	Use of the Refresh Command.....	87
6.5	Editing an Object or Preset Properties in the Configuration Tree.....	88
7	Configuring FSS Equipment.....	89
7.1	First Step for FSS: Create the Subsystems	89
7.2	Adding a Rack or Chassis to the FSS Configuration.....	90
7.3	Adding an LM to a Chassis	90
7.3.1	Basic Steps to Add an LM.....	90
7.3.2	Physical Significance of SubsysID and LMNumber.....	91
7.3.3	Setting the Logical Identification Properties of the LM.....	91
7.4	Adding an I/O Module to a Chassis.....	92
7.5	Hardware/Software Signal Interfaces	93
7.6	Platform Interface Controllers for all Modules	94
7.7	Configuring Links Between OCM and LM Optical Ports.....	96
7.8	LM Ethernet adapters (for FSS-MATS Interfaces)	100
8	Configuring MATS Equipment	101
8.1	Services Used in a Workstation.....	101
8.2	Adding a Rack to the Project Configuration.....	102
8.3	Adding a Workstation to a Rack.....	103
8.4	Adding the Required Services to a Workstation	103
8.5	Configuring FSS and MATS Communications.....	104
8.5.1	Configuration Requirements	104
8.5.2	Configuring a Simple MATS/FSS Interface	105
8.6	Possible Architectures	111
8.7	Ethernet Adapter Address Conventions	113
8.8	LM Ethernet Adapter Properties.....	114
8.9	TuningClient Service Configuring	116
8.9.1	Security Property Configuration	116
8.9.2	Filters Property Configuration	117
9	Editing Application Signals	125
9.1	Signal Concepts	125
9.2	Committed vs Uncommitted (i.e. Pending) Changes	127

9.3	Available Editing Operations	130
9.4	Creating Application Signals.....	130
9.4.1	Creating I/O Signals from Presets	131
9.4.2	Creating Internal Application Signals for Later Use.....	132
9.4.3	Creating Application Signals As-Needed For Interconnection Blocks.....	136
9.5	Editing Application Signals.....	136
9.6	Deleting Application Signals.....	137
9.7	Show Pending ... Undoing Changes	137
9.8	Show Pending ... Checking-In Changes	139
9.9	Contention with Multiple Users	141
9.10	Refreshing the Signal List	142
9.11	Types of Application Signals	142
9.12	Properties of Application Signals	143
9.12.1	Properties of AppSignals – Subset 1 – Identification.....	144
9.12.2	Properties of AppSignals – Subset 2 - Signal Type	145
9.12.3	Properties of AppSignals – Subset 3 – Data Format	145
9.12.4	Properties of AppSignals – Subset 4 – Analog I/O	146
9.12.5	Properties of AppSignals – Subset 5 – Online Monitoring System	148
9.12.6	Properties of AppSignals – Subset 6 – Tuning.....	149
9.13	The Find Function for Application Signals	150
10	Function Block Libraries (AFBL and UFBL).....	152
10.1	The Certified AFBL.....	152
10.1.1	AFBL Overview	152
10.1.2	Version Level of AFBL Blocks.....	153
10.2	User Function Blocks (UFBs)	153
10.2.1	Preliminaries.....	154
10.2.2	Creating a UFB.....	154
10.2.3	Editing UFBs	155
11	Editing Logic Schemas	157
11.1	General Concepts.....	157
11.2	Committed vs Uncommitted (Pending) Changes	159
11.3	Managing Schema Files.....	159
11.3.1	Adding a Schema.....	160
11.3.2	Deleting a Schema.....	162
11.3.3	Viewing a Schema.....	162
11.3.4	Checking-In/Out a Schema and Undoing Changes	164
11.3.5	Opening a Schema for Editing and Saving It	165
11.3.6	Copying Schemas	168
11.3.7	Including/Excluding Schemas in the Build	168
11.4	Functional vs Non-functional Items on Schemas	169
11.4.1	Description of Non-functional Items.....	170
11.4.2	Using Non-functional Items	171
11.5	Editing Operations with Schema Logic Items	171
11.5.1	Adding an Item	174
11.5.2	Zoom In / Zoom Out	176
11.5.3	Scrolling on the Schema.....	177
11.5.4	Selecting and De-Selecting Item(s)	177
11.5.5	Moving an Item	178
11.5.6	Duplicating (Copying) Items.....	178
11.5.7	Editing Properties of an Item.....	178

11.6	Utility Functions Affecting Schema Items	180
11.6.1	Show/Hide Block Label Information	181
11.6.2	Front-to-Back Ordering of Items on the Schema	182
11.6.3	Sizing and Aligning Blocks on the Schema	182
11.6.4	Commenting / Uncommenting Items on a Schema	182
11.6.5	Locking / Unlocking Schema Items in Place	183
11.6.6	Using the Find and Replace Function on a Schema	183
12	Designing Application Logic	185
12.1	Using Input-Output Interface Blocks	186
12.1.1	INPUT Interface Block.....	187
12.1.2	OUTPUT Interface Block.....	188
12.1.3	IN/OUT Interface Block.....	190
12.1.4	Display Formatting of the Interface Blocks	190
12.1.5	Multi-Signal Display Using Interface Blocks	193
12.2	Using Constants	194
12.3	Using AFBs	194
12.4	Extensible AFBs	198
12.5	Using UFBs	199
12.6	Using On-Schema Links.....	199
12.7	Using Optical Communications Links	200
12.7.1	Identifying the OCL to Configure	204
12.7.2	Configuring an OCL Transmitter	204
12.7.3	Configuring an OCL Receiver.....	204
12.8	Application Signals that are Tunable Online.....	205
12.9	Using Bus Types Editor.....	206
13	Designing Monitor Schemas	209
13.1	Basic Displays Based on UAL Schemas	209
14	Performing the Build.....	211
14.1	Performing a Build	211
14.2	Examining Build Errors and Warnings	212
14.3	Decoding Error/Warning Codes and Explanations.....	213
14.4	Build Directory Description	214
14.5	Output Bitstream File (*.bts) Description	218
15	Uploading UAL Configurations to the LMs	223
15.1	Pre-Requisites	223
15.2	Configuration Management	224
15.3	Cable Connections to the LM and File Types to Upload	224
15.4	Configuring the USB Port	225
15.5	Use of RPCT to Upload Configurations	231
15.5.1	RCPT Upload Screens and Functions	231
15.5.2	Uploading Files to the LM with RPCT	233
15.6	Use of MCONF to Upload Configurations.....	234
15.6.1	MCONF Screen Displays	234
15.6.2	MCONF Settings	236
15.6.3	Uploading Files to the LM with MCONF	237
16	Security	240
17	Product Forum.....	241
18	Revision History	242

Figures

Figure 1-1 Range of Configuration Using RPCT	11
Figure 2-1 Radiy FSC Chassis Showing Typical Modules	20
Figure 2-2 Hierarchy of Hardware in FSC-based Systems.....	21
Figure 2-3 RPCT Equipment Configuration Screen	22
Figure 2-4 FSC Capacity Expansion Using OCMs	23
Figure 2-5 RPCT Application Logic Schema Screen	25
Figure 2-6 Hardware and Signal Interfaces of an AI Channel.....	27
Figure 2-7 Monitoring and Tuning Extensions to FSS	28
Figure 2-8 RPCT Configuration of FSS and MATS	30
Figure 3-1 Configuring the Server.....	36
Figure 3-2 Defining a New Login.....	37
Figure 3-3 Defining a Login Role.....	39
Figure 3-4 Setting Up Remote Host Access	40
Figure 3-5 RPCT Installation Setup Wizard Dialogs (1,2).....	40
Figure 3-6 RPCT Installation Setup Wizard Dialogs (3,4).....	41
Figure 3-7 RPCT Installation Setup Wizard Dialogs (5,6).....	41
Figure 3-8 RPCT Maintenance Screen	42
Figure 3-9 Server Access Error Popup	42
Figure 3-10 Server Access Dialog	43
Figure 3-11 Main Areas of the RPCT Screen.....	45
Figure 3-12 Checking Out an Object.....	49
Figure 4-1 Projects Tab Panel Layout	50
Figure 4-2 Create New Project Dialog.....	52
Figure 4-3 Enter username and password Dialog.....	53
Figure 4-4 Version Compatibility Dialog.....	54
Figure 4-5 Version Incompatibility Dialog.....	54
Figure 4-6 Clone Project Password Dialog.....	55
Figure 4-7 Clone Project Name Entering Dialog.....	55
Figure 4-8 Project-Deletion Dialog	56
Figure 4-9 DeleteProject Password Dialog.....	57
Figure 4-10 Initial Project Users Dialog.....	58

Figure 4-11 New User Dialog.....	59
Figure 4-12 Updated Project User Dialog	60
Figure 5-1 Logical Structure of a RPCT Project	63
Figure 5-2 Hierarchical Structures of FSS and MATS Configurations.....	64
Figure 5-3 Configuration of an FSC Chassis.....	66
Figure 5-4 Interconnections of FSS and MATS – Simplest Configuration.....	67
Figure 5-5 Interconnections of FSS and MATS – Redundant Configuration	68
Figure 5-6 Equipment Configuration Tab Display	69
Figure 5-7 Example of Preset Module	77
Figure 5-8 Preset Editing Display.....	78
Figure 6-1 Context Menu of Equipment Tab.....	81
Figure 6-2 Adding an Object to the Structure.....	84
Figure 6-3 Adding a Preset Object to the Structure.....	84
Figure 6-4 Illustration of Essential Property Edits	85
Figure 7-1 Subsystems List Editor.....	90
Figure 7-2 Adding App Signals to a Module.....	93
Figure 7-3 Configuring an Optical Communications Link.....	99
Figure 8-1 Services in Workstation	101
Figure 8-2 Adding Services to a Workstation.....	104
Figure 8-3 Reference FSS/MATS Interface Diagram	106
Figure 8-4 LM Ethernet Adapter 1 Properties for Tuning Links.....	107
Figure 8-5 LM Ethernet Adapter 2 Properties for MATS Links	108
Figure 8-6 LM Ethernet Adapter 3 Properties for (Optional) MATS Links.....	108
Figure 8-7 ADS Service Properties for FSS Links	109
Figure 8-8 ADS Data Channel Properties.....	110
Figure 8-9 Monitor Service Properties for the ADS/MON Link.....	110
Figure 8-10 FSS-MATS Interconnections – Simplest Configuration.....	112
Figure 8-11 FSS-MATS Interconnections – Redundant Configuration	113
Figure 9-1 Illustration of Making On-Schema Links Globally Available.....	126
Figure 9-2 Application Signals Display with Editor Open.....	128
Figure 10-1 Example of an AFB on a Logic Schema.....	153
Figure 10-2 Creating a New UFB File.....	155

Figure 10-3 Setting Properties of a New UFB.....	155
Figure 11-1 Application Logic Schema List.....	158
Figure 11-2 Schema Context Menu	160
Figure 11-3 New Application Logic Schema Properties Dialog	161
Figure 11-4 New Schema Filename Error Dialog	162
Figure 11-5 Selection of Logic Schema Version to View	163
Figure 11-6 Display of a Logic Schema in its Tab	163
Figure 11-7 Schema File Check-in Justification Dialog.....	165
Figure 11-8 Schema File Operation Sub-Menu	167
Figure 11-9 Schema File Close Dialog.....	167
Figure 11-10 Property Dialog for a Schema	169
Figure 11-11 The Four Non-Functional Items.....	170
Figure 11-12 Descriptive Framing a Section of UAL on a Schema	171
Figure 11-13 Schema Item Editing Context Menu	172
Figure 11-14 Selection Trail for Adding an Item to a Logic Schema	175
Figure 11-15 Selection of AFB to Add to a Logic Schema.....	175
Figure 11-16 Tool Icons to Add Items to a Schema	176
Figure 11-17 Property Editing Operation Options.....	179
Figure 11-18 Example Property Edit Dialog for a Line Item.....	179
Figure 11-19 Block Property Edit Dialog.....	181
Figure 11-20 Example of a Block Label.....	181
Figure 11-21 Example of a Commented-out Block.....	183
Figure 11-22 Example of a Find and Replace Dialog.....	184
Figure 12-1 Functional Items for Logic Schemas.....	185
Figure 12-2 Illustration of Use of Interface Blocks	186
Figure 12-3 Setting the AppSignalIDs Property of an OUTPUT Block	189
Figure 12-4 Adding a New AppSignal for an OUTPUT Block.....	190
Figure 12-5 Display Defaults for INPUT, OUTPUT and IN/OUT Blocks	191
Figure 12-6 Display Properties for INPUT, OUTPUT and IN/OUT Blocks	192
Figure 12-7 Multi-Signal Display Using the INPUT Block.....	193
Figure 12-8 Selecting an AFB	195
Figure 12-9 Inputs and Outputs of Blocks Showing Connecting Links	196

Figure 12-10 Internal Tuning Parameters of AFBs	197
Figure 12-11 External vs Internal Parameters of AFBs.....	198
Figure 12-12 Voter Block Properties.....	199
Figure 12-13 OCL Example – Chassis 1 Side	202
Figure 12-14 OCL Example – Chassis 2 Side	203
Figure 13-1 UAL Schematic Showing AppSignals and Monitoring Properties.....	210
Figure 13-2 Resulting Monitor Display	210
Figure 14-1 Build Log Including Files not Checked-in.....	212
Figure 15-1 Upload Cable Shown connected to an LM Port.....	224
Figure 15-2 Photograph of the LM Showing 4 UART Connectors.....	225
Figure 15-3 Device Manager Screen	226
Figure 15-4 Context Menu for FT232R USB UART	226
Figure 15-5 Update Driver Software Dialog for FT232R USB UART.....	227
Figure 15-6 Driver location Dialog for FT232R USB UART.....	227
Figure 15-7 Folder Selection of FT232R USB UART driver.....	228
Figure 15-8 Update Driver Software Dialog	228
Figure 15-9 Successful Message for Driver Update Dialog	229
Figure 15-10 Context Menu for USB Serial Port	229
Figure 15-11 Update Driver Software Dialog for USB Serial Port.....	230
Figure 15-12 Driver location Dialog for USB Serial Port.....	230
Figure 15-13 Successful Message for Driver Update Dialog	231
Figure 15-14 The Main Upload Screen in RPCT	231
Figure 15-15 Initial MCONF Screen	234
Figure 15-16 MCONF Settings Dialog.....	237
Figure 15-17 Initial Part of Upload Log	239
Figure 15-18 Final Part of Upload Log.....	239

Tables

Table 1-1 Version Information	13
Table 3-1 Server Access settings dialog fields description	43
Table 3-1 Main Toolbar Functions	45
Table 3-2 MainTab Functions.....	47

Table 4-1 Projects Tab Panel Content	50
Table 4-2 Project Creation Properties.....	52
Table 4-3 New User Login Parameters.....	59
Table 4-4 Project User Properties	61
Table 5-1 For FSS equipment.....	71
Table 5-2 For MATS equipment.....	71
Table 5-3 System Object Properties	73
Table 5-4 Rack Object Properties	73
Table 5-5 Chassis Object Properties	74
Table 5-6 Workstation Object Properties (MATS only).....	74
Table 5-7 Module Object Properties.....	74
Table 5-8 Controller Object Properties.....	75
Table 6-1 Major Operation Options for Equipment	81
Table 6-2 Available Child Presets and Objects	83
Table 6-3 Place Value Constraints.....	86
Table 7-1 SubsystemID and LMNumber Constraints	91
Table 7-2 Basic PIC Output Signal Ports (all modules)	94
Table 7-3 Extra PIC Output Signal Ports (LM, DOM, AOM only)	95
Table 7-4 Extra PIC Signal Ports (LM only).....	96
Table 8-1 LM Ethernet IP Address Convention for 1st FSS/MATS Link	113
Table 12-2 LM Ethernet IP Address Convention for a 2nd FSS/MATS Link	113
Table 8-3 MATS WS Ethernet IP Address Convention	114
Table 8-4 LM Ethernet Adapter Properties	114
Table 9-1 Add Application Signal Dialog Properties	135
Table 9-2 Properties of AppSignals- Subset 1 - Identification	144
Table 9-3 Properties of AppSignals- Subset 2 – Signal Type	145
Table 9-4 Properties of AppSignals- Subset 3 – Data Format.....	145
Table 9-5 Properties of AppSignals- Subset 4a – Analog Input signals.....	146
Table 9-6 Properties of AppSignals- Subset 4b – Analog Output signals.....	148
Table 9-7 Properties of AppSignals - Subset 5 – Online Monitoring System.....	148
Table 9-8 Properties of AppSignals- Subset 6 – Tuning	150
Table 11-1 ApplicationLogic Item-Editing Commands	172
Table 15-1 LM Ports Used for Uploading Files	225