



FSC Radiy Platform Configuration Tool User Manual (FSC RPCT UM)

RadICS

(Radiy FSC – FPGA-based Safety Controller)

Document D11.6

Version V5, Revision R4

April 2024

CONFIDENTIAL INFORMATION

Contents

Contents	2
1 Introduction	13
1.1 Overview	13
1.2 Scope and Purpose of this Document	14
1.3 Applicability and Version Information.....	15
1.4 IEC 61508 Certification of the RadICS FSC.....	15
1.5 References	16
1.6 Product Documents Referenced by this User Manual	16
1.7 Definitions and Acronyms.....	17
2 Overview of RPCT and Related RadICS Systems	22
2.1 Brief Description of the RadICS FSC and It's Configuration.....	22
2.1.1 FSC Chassis Hardware	22
2.1.2 Large Systems Involving Multiple FSC Chassis.....	24
2.1.3 Use of RPCT to Define a Hardware Configuration.....	24
2.1.4 Expansion of FSC Capacity.....	26
2.1.5 User Application Logic (UAL)	27
2.1.6 FSC I/O Modules and Connections to UAL.....	29
2.2 Brief Description of the Monitoring and Tuning System (MATS)	30
2.3 Overview of RPCT	31
2.3.1 Using RPCT to Define the FSC Systems	32
2.3.2 Using RPCT to Define the MATS Systems	35
2.3.3 Notation in this UM:.....	36
2.3.4 Bullets:.....	36
2.3.5 Terminology in this UM:.....	36
2.3.6 Platform Dependencies:.....	37
3 Installation and Setup of RPCT	38
3.1 System Requirements	38
3.1.1 Hardware and Operating System Requirements:	38
3.1.2 Software and Libraries Required.....	38
3.2 PostgreSQL Server Setup	38
3.3 Installation of RPCT on a Windows Platform.....	41
3.3.1 Initial Installation of RPCT	41
3.3.2 Subsequent Installations, Repairs, Removal of RPCT	43
3.3.3 Setup of RPCT-Server Connection	44
3.4 RPCT User Interface	46
3.5 Shortcuts	51
3.6 Multi-User Operation	54
4 Managing Application Projects	56
4.1 Creating a Project	57
4.2 Opening a Project for Viewing or Editing.....	59
4.3 Managing Incompatibility of RPCT and Database Versions	60
4.4 Closing an Open Project	61
4.5 Cloning a Project	62
4.6 Deleting a Project	63
4.7 Refreshing the Project List	64
4.8 Creating and Managing Project-Design Users	65
4.8.1 Creating or Disabling Users	65

4.8.2	Assignment of User Properties	67
4.9	User Property Changes by Design-Users	69
4.10	Project Menu Features	69
4.10.1	Project History	69
4.10.2	Project Pending Changes	70
4.10.3	Project Differences Report	71
4.10.4	Project Schemas Export.....	72
4.10.5	Project Properties.....	73
5	Equipment Configuration Concepts.....	75
5.1	Physical vs Logical Structure of a Project System	75
5.2	Structure of an Equipment Configuration	77
5.3	FSS Chassis Configurations	78
5.4	MATS and FSS-MATS Communications Configurations.....	79
5.4.1	Example of a Physical Structure.....	82
5.5	Properties of the Various Objects	83
5.5.1	Common Properties	83
5.5.2	User-Adjustable Properties of All Object Types.....	86
5.5.3	Presets.....	89
6	Equipment Configuration Editor	94
6.1	Overview of Operations to Define an Equipment Configuration.....	94
6.2	Adding an Object or Preset to the Configuration Tree	97
6.2.1	Adding an Object or Preset: Step 1- Adding It.....	98
6.2.2	Adding an Object or Preset: Step 2- Setting Essential Properties	99
6.2.3	Setting the Place Property	100
6.2.4	Setting the EquipmentIDTemplate Property	101
6.3	Deleting an Object or Preset from the Configuration Tree	102
6.4	Use of the Refresh Command.....	102
6.5	Editing an Object or Preset Properties in the Configuration Tree	103
6.6	Use of Locator Control	103
7	Configuring FSS Equipment.....	105
7.1	First Step for FSS: Create the Subsystems	105
7.2	Adding a Rack or Chassis to the FSS Configuration.....	106
7.3	Adding an LM to a Chassis	106
7.3.1	Physical Significance of SubsystemID and LMNumber.....	106
7.3.2	Setting the Logical Identification Properties of the LM.....	107
7.4	Adding an I/O Module to a Chassis.....	108
7.5	Hardware/Software Signal Interfaces	110
7.6	Platform Interface Controllers for all Modules	110
7.7	Configuring Links Between OCM and LM Optical Ports.....	113
7.8	LM Ethernet adapters (for FSS-MATS Interfaces)	117
8	Configuring MATS Equipment	118
8.1	Services Used in a Workstation.....	118
8.2	Adding a Rack to the Project Configuration	120
8.3	Adding a Workstation to a Rack.....	120
8.4	Adding the Required Services and Clients to a Workstation	120
8.5	Configuring FSS and MATS Communications.....	121
8.5.1	Configuration Requirements	121
8.5.2	Configuring a Simple MATS/FSS Interface	122
8.6	Possible Architectures	136

8.7	Ethernet Adapter Address Conventions	137
8.8	LM Ethernet Adapter Properties.....	137
8.9	TuningClient Properties Configuring	140
8.9.1	Security Property Configuration.....	140
8.9.2	Filters Property Configuration.....	142
9	Editing Application Signals.....	154
9.1	Signal Concepts	154
9.2	Committed vs Uncommitted (i.e. Pending) Changes	156
9.3	Available Editing Operations	159
9.3.1	Creating I/O Signals from Presets	159
9.3.2	Creating Internal Application Signals From AppSignals Tab.....	161
9.4	Editing Application Signals.....	164
9.5	Deleting Application Signals.....	165
9.6	Undoing Changes	166
9.7	Checking-In Changes	167
9.8	Contention with Multiple Users	168
9.9	Refreshing the Signal List	169
9.10	Types of Application Signals	169
9.11	Properties of Application Signals	170
9.11.1	Properties of AppSignals – Subset 1 – Identification.....	172
9.11.2	Properties of AppSignals – Subset 2 – Signal Type.....	172
9.11.3	Properties of AppSignals – Subset 3 – Data Format	173
9.11.4	Properties of AppSignals – Subset 4 – Signal Processing.....	173
9.11.5	Properties of AppSignals – Subset 5 – Electric Parameters	179
9.11.6	Properties of AppSignals – Subset 6 – Online Monitoring System ...	180
9.11.7	Properties of AppSignals – Subset 7 – Tuning.....	182
9.11.8	Properties of AppSignals – Subset 8 – Expert Properties	183
9.12	The Filtering Function for Application Signals.....	184
9.13	View history of signals changes.....	185
9.14	Cloning of signals	186
10	Function Block Libraries (AFBL and UFBL)	187
10.1	The Certified AFBL.....	187
10.1.1	AFBL Overview	187
10.1.2	Version Level of AFBL Blocks.....	188
10.2	User Function Blocks (UFBs)	190
10.2.1	Creating a UFB.....	190
10.2.2	Editing UFBs	192
11	Editing Logic Schemas.....	195
11.1	General Concepts.....	195
11.2	Committed vs Uncommitted (Pending) Changes	197
11.3	Managing Schemas	197
11.3.1	Adding a Schema.....	199
11.3.2	Deleting a Schema	201
11.3.3	Viewing Schema Changesets	201
11.3.4	Checking-In/Out a Schema and Undoing Changes	203
11.3.5	Opening a Schema for Editing and Saving It	204
11.3.6	Cloning a Schema.....	206
11.3.7	Including/Excluding Schemas in the Build	207
11.3.8	Schema Joining.....	207
11.3.9	Comparing Different Versions of the Schema	209

11.3.10	Tags Editor	209
11.3.11	Client Behavior Editor.....	211
11.4	Functional vs Non-functional Items on Schemas	212
11.4.1	Description of Non-functional Items.....	213
11.4.2	Using Non-functional Items	214
11.5	Editing Operations with Schema Logic Items	215
11.5.1	Adding and Deleting an Item	218
11.5.2	Using Layers of the Schema.....	221
11.5.3	Zoom In / Zoom Out.....	221
11.5.4	Scrolling on the Schema	222
11.5.5	Selecting and De-Selecting Item(s)	222
11.5.6	Moving an Item	223
11.5.7	Duplicating (Copying) Items	223
11.5.8	Editing Properties of an Item.....	223
11.6	Utility Functions Affecting Schema Items	226
11.6.1	Show/Hide Block Label Information	226
11.6.2	Front-to-Back Ordering of Items on the Schema	227
11.6.3	Sizing and Aligning Blocks on the Schema	227
11.6.4	Commenting / Uncommenting Items on a Schema.....	228
11.6.5	Locking / Unlocking Schema Items in Place	228
11.6.6	Using the Find and Replace Function on a Schema.....	228
12	Designing Application Logic	230
12.1	Using Input-Output Interface Blocks	231
12.1.1	INPUT Interface Block.....	232
12.1.2	OUTPUT Interface Block.....	233
12.1.3	IN/OUT Interface Block.....	235
12.1.4	Display Formatting of the Interface Blocks	235
12.2	Using Constants	238
12.3	Using AFBs	238
12.4	Extensible AFBs	241
12.5	Using UFBs	242
12.6	Using On-Schema Links.....	242
12.7	Using Optical Communications Links	243
12.7.1	Identifying the OCL to Configure	247
12.7.2	Configuring an OCL Transmitter	247
12.7.3	Configuring an OCL Receiver.....	247
12.8	Application Signals that are Tunable Online.....	248
12.9	Using Bus Types Editor.....	249
12.10	Using Loopbacks	251
13	Designing Monitor Schemas.....	253
13.1	Basic Displays Based on UAL Schemas	253
13.2	Custom Displays	254
14	Performing the Build	260
14.1	Performing a Build	260
14.2	Examining Build Errors and Warnings	261
14.3	Decoding Error/Warning Codes and Explanations	261
14.4	RPCT Outputs Files.....	263
15	Uploading UAL Configurations to the LMs	264
15.1	Pre-Requisites	264

15.2	Configuration Management	265
15.3	Cable Connections to the LM and File Types to Upload	265
15.4	Configuring the USB Port	266
15.5	Use of RPCT to Upload Configurations.....	270
15.5.1	RPCT Upload Screens and Functions	270
15.5.2	Uploading Files to the LM with RPCT	272
15.6	Use of MCONF to Upload Configurations.....	272
15.6.1	MCONF Screen Displays	272
15.6.2	MCONF Settings	275
15.6.3	Uploading Files to the LM with MCONF	276
16	Simulator.....	278
16.1	Simulator Main Work Area	279
16.2	Simulation process.....	282
16.2.1	Loading Build Project.....	282
16.2.2	Simulation Process Management	287
16.2.3	Signal Value Configuration	289
16.2.4	Monitoring the Simulation Process Results	293
16.2.5	Physical LM Simulation Process.....	295
17	Tests.....	297
17.1	Tests Tab Main Work Area	298
17.2	Managing Project Tests Files	300
17.2.1	Adding a Test File	301
17.2.2	Deleting a Test File	303
17.2.3	Checking-In/Out a Test File and Undoing Changes.....	304
17.2.4	History and Comparing Different Versions of the Test File	305
17.2.5	Opening a Test File for Editing	307
17.2.6	Running a Test File	309
18	Security.....	311
19	Product Support.....	312
20	Revision History	313

Figures

Figure 1-1	Range of Configuration Using RPCT	13
Figure 2-1	Radiy FSC Chassis Showing Typical Modules	23
Figure 2-2	Hierarchy of Hardware in FSC-based Systems.....	24
Figure 2-3	RPCT Equipment Configuration Screen	25
Figure 2-4	FSC Capacity Expansion Using OCMs	26
Figure 2-5	RPCT Application Logic Schema Screen	28
Figure 2-6	Hardware and Signal Interfaces of an AI Channel.....	30
Figure 2-7	Monitoring and Tuning Extensions to FSS	31
Figure 2-8	RPCT Configuration of FSS and MATS	33
Figure 3-1	Configuring the Server	39
Figure 3-2	Defining a New Login.....	39
Figure 3-3	Defining a Login Role.....	40
Figure 3-4	Setting Up Remote Host Access	41
Figure 3-5	RPCT Installation Setup Wizard Dialogs (1,2).....	42
Figure 3-6	RPCT Installation Setup Wizard Dialogs (3,4,5).....	42
Figure 3-7	RPCT Installation Setup Wizard Dialogs (6,7).....	43

Figure 3-8 RPCT Maintenance Screens (8,9)	43
Figure 3-9 Server Access Error Popup	44
Figure 3-10 Server Access Dialog	45
Figure 3-11 Main Areas of the RPCT Screen	46
Figure 3-12 Checking Out an Object	55
Figure 4-1 Projects Tab Panel Layout	56
Figure 4-2 Create New Project Dialog	58
Figure 4-3 Enter username and password Dialog	60
Figure 4-4 Database Version is Lower Than the Program Version Dialog	60
Figure 4-5 Database Version is Higher Than the Program Version Dialog	61
Figure 4-6 Clone Project Password Dialog	62
Figure 4-7 Clone Project Name Entering Dialog	62
Figure 4-8 Project-Deletion Dialog	63
Figure 4-9 Delete Project Password Dialog	64
Figure 4-10 Initial Project Users Dialog	66
Figure 4-11 New User Dialog	67
Figure 4-12 Updated Project Users Dialog	68
Figure 4-13 Project History Window	70
Figure 4-14 Project Pending Changes Window	70
Figure 4-15 Project Differences Report Window	71
Figure 4-16 Project Export Schemas to Album Window	72
Figure 4-17 Project Properties Window	73
Figure 5-1 Logical Structure of an RPCT Project	76
Figure 5-2 Hierarchical Structures of FSS and MATS Configurations	77
Figure 5-3 Configuration of an FSC Chassis	79
Figure 5-4 Interconnections of FSS and MATS – Simplest Configuration	80
Figure 5-5 Interconnections of FSS and MATS – Redundant Configuration	81
Figure 5-6 Equipment Configuration Tab Display	82
Figure 5-7 Example of Preset Module	90
Figure 5-8 Preset Editing Display	91
Figure 5-9 Update From Preset Window	92
Figure 6-1 Context Menu of Equipment Tab	95
Figure 6-2 Adding an Object to the Structure	98
Figure 6-3 Adding a Preset Object to the Structure	99
Figure 6-4 Illustration of Essential Property Edits	100
Figure 6-5 Using Locator Control	104
Figure 7-1 Subsystems List Editor	106
Figure 7-2 Adding App Signals to a Module	109
Figure 7-3 Configuring an Optical Communications Link	116
Figure 8-1 Services in Workstation	118
Figure 8-2 Adding Services to a Workstation	121
Figure 8-3 Reference FSS/MATS Interface Diagram	122
Figure 8-4 LM Ethernet Adapter 1 Properties for Tuning Links	124
Figure 8-5 LM Ethernet Adapter 2 Properties for MATS Links	124
Figure 8-6 LM Ethernet Adapter 3 Properties for (Optional) MATS Links	125
Figure 8-7 Configuration Service Properties	126
Figure 8-8 Application Data Service Properties	126
Figure 8-9 Archive Service Properties	128
Figure 8-10 Monitor Properties	130
Figure 8-11 Tuning Service Properties	131

Figure 8-12 Tuning Client Properties	132
Figure 8-13 Test Suite Client Properties.....	134
Figure 8-14 Report Templates Window	135
Figure 8-15 Tuning Client Property Window	140
Figure 8-16 User List in Tuning Client.....	141
Figure 8-17 MATS User Editor	141
Figure 8-18 Filters Window	143
Figure 8-19 Default Tree Type Filter.....	144
Figure 8-20 Example of Tree Filter in Tuning Client.....	150
Figure 8-21 Example of Nested Custom Filters in RPCT	151
Figure 8-22 Signals Filters Sub-tab	151
Figure 8-23 Value Properties Are Set to Different Signal Values.....	153
Figure 9-1 Illustration of Making On-Schema Links Globally Available.....	155
Figure 9-2 Application Signals Display with Editor Open	157
Figure 9-3 Column Headers Option Window	158
Figure 9-4 Create Signals Dialog.....	162
Figure 9-5 Signal Properties Dialog for Analog Signal.....	162
Figure 9-6 Signal Properties Dialog for Discrete Signal	163
Figure 9-7 Signal Properties Dialog for Bus Signal	163
Figure 9-8 Example of the ‘Undo signal changes’ Dialog	167
Figure 9-9 Example of the ‘Check In Signal(s)’ Dialog.....	168
Figure 9-10 Example of Editing Screen for AppSignal Properties.....	171
Figure 9-11 Specific Properties Window.....	183
Figure 9-12 Example of an Application Signal Search	185
Figure 9-13 Signal History Window	185
Figure 10-1 Example of an AFB on a Logic Schema.....	188
Figure 10-2 AFBL Version.....	188
Figure 10-3 AFB Library Check Window	189
Figure 10-4 Creating a New UFB Schema	191
Figure 10-5 Setting Properties of a New UFB.....	191
Figure 10-6 Specific Properties Window.....	193
Figure 10-7 UFB With Configured Specific Property.....	193
Figure 10-8 Input Block Used in UFB Calculations.....	194
Figure 11-1 Application Logic Schema List.....	196
Figure 11-2 Schema Context Menu	199
Figure 11-3 New Application Logic Schema Properties Dialog	200
Figure 11-4 New Schema Filename Error Dialog	201
Figure 11-5 Selection of Logic Schema Version to View	202
Figure 11-6 Display of a Logic Schema in its Tab	202
Figure 11-7 Schema File Check-in Justification Dialog.....	204
Figure 11-8 Schema File Operation Sub-Menu	206
Figure 11-9 Schema File Close Dialog	206
Figure 11-10 Schema Joining	208
Figure 11-11 Tags Editor	210
Figure 11-12 Schemas Tags Window	211
Figure 11-13 Client Behavior Editor	212
Figure 11-14 The Non-Functional Items	214
Figure 11-15 Descriptive Framing a Section of UAL on a Schema	215
Figure 11-16 Schema Item Editing Context Menu	216
Figure 11-17 Selection Trail for Adding an Item to a Logic Schema	219

Figure 11-18 Selection of AFB to Add to a Logic Schema.....	219
Figure 11-19 Tool Icons to Add Items to a Schema	220
Figure 11-20 Layers Status Bar on the Schema.....	221
Figure 11-21 Property Editing Operation Options.....	224
Figure 11-22 Example of a Property Edit Dialog for a Line Item	225
Figure 11-23 Block Property Edit Dialog.....	226
Figure 11-24 Example of a Block Label.....	227
Figure 11-25 Example of a Commented-out Block.....	228
Figure 11-26 Example of a Find and Replace Dialog.....	229
Figure 12-1 Functional Items for Logic Schemas.....	230
Figure 12-2 Illustration of Use of Interface Blocks	231
Figure 12-3 Setting the AppSignalIDs Property of an OUTPUT Block	234
Figure 12-4 Adding a New AppSignal for an OUTPUT Block.....	235
Figure 12-5 Display Defaults for INPUT, OUTPUT and IN/OUT Blocks	236
Figure 12-6 Display Properties for INPUT, OUTPUT and IN/OUT Blocks	236
Figure 12-7 Selecting an AFB	239
Figure 12-8 Inputs and Outputs of Blocks Showing Connecting Links	239
Figure 12-9 Internal Tuning Parameters of AFBs	240
Figure 12-10 External vs Internal Parameters of AFBs.....	241
Figure 12-11 Voter Block Properties	242
Figure 12-12 OCL Example – Chassis 1 Side	245
Figure 12-13 OCL Example – Chassis 2 Side	245
Figure 12-14 Bus Types Editor Window	249
Figure 12-15 Signal Editing Window	250
Figure 12-16 Example of Bus Composer and Bus Extractor.....	251
Figure 12-17 Example of Loopback Target and Loopback Source.....	251
Figure 13-1 UAL Schematic Showing AppSignals and Monitoring Properties.....	254
Figure 13-2 Resulting Monitor Display	254
Figure 13-3 Monitor Schema Design Items.....	255
Figure 13-4 Monitor Schema Example (1)	257
Figure 13-5 Monitor Schema Example (2)	257
Figure 13-6 Monitor Schema Example (3)	258
Figure 13-7 Resulting Monitor Schema.....	258
Figure 14-1 Build Log	260
Figure 15-1 Upload Cable Shown connected to an LM Port.....	265
Figure 15-2 Photograph of the LM Showing 4 UART Connectors.....	266
Figure 15-3 Device Manager Screen	267
Figure 15-4 Context Menu for FT232R USB UART	267
Figure 15-5 Update Driver Software Dialog for FT232R USB UART.....	268
Figure 15-6 Driver Location Dialog for FT232R USB UART.....	268
Figure 15-7 Folder Selection of FT232R USB UART driver.....	269
Figure 15-8 Update Driver Software Dialog	269
Figure 15-9 Successful Message for Driver Update Dialog	270
Figure 15-10 The Main Upload Screen in RPCT	270
Figure 15-11 Initial MCONF Screen	273
Figure 15-12 MCONF Settings Window	275
Figure 15-13 Initial Part of Upload Log	277
Figure 15-14 Final Part of Upload Log.....	277
Figure 16-1 Main Fields of the Simulator Work Area.....	279
Figure 16-2 Select Build Window	282

Figure 16-3 Successfully Opened Build in Simulator	283
Figure 16-4 List of Application Logic Schemas	283
Figure 16-5 LM Detailed Information Tab	284
Figure 16-6 Connection Detailed Information Tab	285
Figure 16-7 Application Logic Schema While Simulation Is Not Running	285
Figure 16-8 Simulator Profiles Editor	286
Figure 16-9 Application Logic Schema While Simulation is Running	288
Figure 16-10 Disabled Connection and LM	288
Figure 16-11 Disabled LM	289
Figure 16-12 Signal Was Added to Override Field	290
Figure 16-13 Signal Value Changed	290
Figure 16-14 Override Signal Value Script Window	291
Figure 16-15 Script Save Menu	292
Figure 16-16 Script Load Menu	292
Figure 16-17 Restore Workspace Function	293
Figure 16-18 Signals Snapshot Window	294
Figure 16-19 Simulator Trends Window	294
Figure 16-20 Top-Level Context Menu	295
Figure 17-1 Main Fields of the Tests Tab Work Area	298
Figure 17-2 Test File Context Menu	301
Figure 17-3 New Test File Dialog	302
Figure 17-4 New Test File Name Error Dialog	302
Figure 17-5 Deleting Test File Dialog	303
Figure 17-6 Test File Check-in Justification Dialog	305
Figure 17-7 Test File Changeset Information Window	306
Figure 17-8 Test File Compare Dialog	307
Figure 17-9 Test File Script Code	308
Figure 17-10 Test File Close Dialog	309
Figure 17-11 Tests Output Field	310

Tables

Table 1-1 Version Information	15
Table 1-2 Reference Standards	16
Table 1-3 Reference Documents †	16
Table 2-1 List of Optional Modules	23
Table 3-1 Server Access settings dialog fields description	45
Table 3-2 RPCT Main Screen	46
Table 3-3 Top-level menu	47
Table 3-4 High-level tabs	50
Table 3-5 RPCT Shortcuts	51
Table 4-1 Projects Tab Panel Content	56
Table 4-2 Project Creation Properties	58
Table 4-3 New User Login Parameters	67
Table 4-4 Project User Properties	68
Table 4-5 Project Properties Window	73
Table 5-1 For FSS equipment	84
Table 5-2 For MATS equipment	85
Table 5-3 System Object Properties	87
Table 5-4 Rack Object Properties	87

Table 5-5 Chassis Object Properties	87
Table 5-6 Workstation Object Properties (MATS only).....	87
Table 5-7 Module Object Properties.....	88
Table 5-8 Controller Object Properties.....	89
Table 6-1 Major Operation Options for Equipment	95
Table 6-2 Place Value Constraints.....	101
Table 7-1 SubsystemID and LMNumber Constraints	107
Table 7-2 Basic PIC Output Signal Ports (all modules)	111
Table 7-3 Extra PIC Output Signal Ports (LM1-SF00, LM1-SF40-4PH, DOM, AOM only)	111
Table 7-4 Extra PIC Signal Ports (LM1-SF00, LM1-SF40-4PH only).....	111
Table 7-5 Extra PIC Signal Ports (DIM, DOM, AIM-4PH, AOM-4PH, RIM-4PH, TIM-4PH, WAIM-4PH only)	112
Table 7-6 Extra PIC Signal Ports (LM1-SF00, LM1-SF40-4PH, AOM, DOM, AOM-4PH only)	112
Table 7-7 Extra PIC Signal Ports (LM1-SF40-4PH only).....	113
Table 7-8 Extra PIC Signal Ports (OCM only).....	113
Table 7-9 Connection Properties	114
Table 7-10 Connections Editor	116
Table 8-1 MATS Services and Clients	119
Table 8-2 LM Ethernet IP Address Convention for 1st FSS/MATS Link	137
Table 8-3 LM Ethernet IP Address Convention for a 2nd FSS/MATS Link	137
Table 8-4 MATS WS Ethernet IP Address Convention	137
Table 8-5 LM Ethernet Adapter Properties	138
Table 8-6 Filters Main Window.....	143
Table 8-7 Tree Filter Properties	145
Table 8-8 Tab Filter Properties	145
Table 8-9 Button Filter Properties	147
Table 8-10 Counter Filter Properties	148
Table 8-11 Schemas Tab Filter Properties.....	149
Table 9-1 Add Application Signal Dialog Properties	164
Table 9-2 Subsets of Properties for AppSignals	170
Table 9-3 Properties of AppSignals - Subset 1 - Identification	172
Table 9-4 Properties of AppSignals - Subset 2 - Signal Type	172
Table 9-5 Properties of AppSignals - Subset 3 - Data Format(Analog)	173
Table 9-6 Properties of AppSignals - Subset 3 - Data Format(Discrete)	173
Table 9-7 Properties of AppSignals - Subset 4a - Signal Processing (AIM).....	174
Table 9-8 Properties of AppSignals - Subset 4a - Signal Processing (AIM-4PH, WAIM-4PH)	175
Table 9-9 Properties of AppSignals - Subset 4a - Signal Processing (RIM-4PH).....	176
Table 9-10 Properties of AppSignals - Subset 4a - Signal Processing (TIM-4PH).....	177
Table 9-11 Properties of AppSignals - Subset 4b - Signal Processing (AOM).....	178
Table 9-12 Properties of AppSignals - Subset 4b - Signal Processing (AOM-4PH).....	178
Table 9-13 Properties of AppSignals - Subset 5 - Electric Parameters (AIM, TIM-4PH, WAIM-4PH)	179
Table 9-14 Properties of AppSignals - Subset 5 - Electric Parameters (AIM-4PH)	179
Table 9-15 Properties of AppSignals - Subset 5 - Electric Parameters (RIM-4PH).....	180
Table 9-16 Properties of AppSignals - Subset 6 - Online Monitoring System.....	181
Table 9-17 Properties of AppSignals- Subset 7 - Tuning	182
Table 11-1 Context Menu for Schemas Management	198

Table 11-2 Application Logic Item-Editing Commands	216
Table 13-1 Monitor Schema Items	255
Table 15-1 LM Ports Used for Uploading Files	266
Table 15-2 MCONF Settings Window	275
Table 16-1 Simulator Tab Screen	279
Table 16-2 Simulator Main Work Area	280
Table 17-1 Tests Tab Main Screen	298
Table 17-2 Tests Tab Main Work Area	299
Table 17-3 Context Menu For Tests Management	300