



FSC Radiy Platform Configuration Tool User Manual (FSC RPCT UM)

RadICS

(Radiy FSC – FPGA-based Safety Controller)

Document D11.6

Version V4, Revision R1

(RPCT version **0.8.729**)

February 2020

CONFIDENTIAL INFORMATION

Contents

1	Introduction	13
1.1	Overview	13
1.2	Scope and Purpose of this Document	14
1.3	Applicability and Version Information	15
1.4	IEC 61508 Certification of the RadICS FSC	16
1.5	References	16
1.6	Product Documents Referenced by this User Manual	16
1.7	Definitions and Acronyms	17
2	Overview of RPCT and Related RadICS Systems	22
2.1	Brief Description of the RadICS FSC and Configuring It	22
2.1.1	FSC Chassis Hardware	22
2.1.2	Large Systems Involving Multiple FSC Chassis	24
2.1.3	Use of RPCT to Define a Hardware Configuration	24
2.1.4	Expansion of FSC Capacity	26
2.1.5	User Application Logic (UAL)	27
2.1.6	FSC I/O Modules and Connections to UAL	29
2.2	Brief Description of the Monitoring and Tuning System (MATS)	30
2.3	Overview of RPCT	31
2.3.1	Using RPCT to Define the FSC Systems	32
2.3.2	Using RPCT to Define the MATS Systems	34
2.3.3	Notation in this UM:	35
2.3.4	Bullets:	36
2.3.5	Terminology in this UM:	36
2.3.6	Platform Dependencies:	36
3	Installation and Setup of RPCT	37
3.1	System Requirements	37
3.1.1	Hardware and Operating System Requirements:	37
3.1.2	Software and Libraries Required	37
3.2	PostgreSQL Server Setup	37
3.3	Installation of RPCT on a Windows Platform	40
3.3.1	Initial Installation of RPCT	40
3.3.2	Subsequent Installations, Repairs, Removal of RPCT	42
3.3.3	Setup of RPCT-Server Connection	42
3.4	RPCT User Interface	44
3.5	Shortcuts	47
3.6	Multi-User Operation	50
4	Managing Application Projects	52
4.1	Creating a Project	53
4.2	Opening a Project for Viewing or Editing	55
4.3	Managing Incompatibility of RPCT and Database Versions	56
4.4	Closing an Open Project	57
4.5	Cloning a Project	57
4.6	Deleting a Project	58
4.7	Refreshing the Project List	60
4.8	Creating and Managing Project-Design Users	60
4.8.1	Creating or Disabling Users	60
4.8.2	Assignment of User Properties	62
4.9	User Property Changes by Design-Users	64

4.10	Project Properties.....	65
5	Equipment Configuration Concepts.....	67
5.1	Physical vs Logical Structure of a Project System	67
5.2	Structure of an Equipment Configuration	69
5.3	FSS Chassis Configurations	69
5.4	MATS and FSS-MATS Communications Configurations.....	71
5.4.1	Example of a Physical Structure:	74
5.5	Properties of the Various Objects	75
5.5.1	Common Properties	75
5.5.2	User-Adjustable Properties of All Object Types.....	78
5.5.3	Presets.....	81
6	Equipment Configuration Editor	85
6.1	Overview of Operations to Define an Equipment Configuration.....	85
6.2	Adding an Object or Preset to the Configuration Tree	88
6.2.1	Adding an Object or Preset: Step 1- Adding It	88
6.2.2	Adding an Object or Preset: Step 2- Setting Essential Properties	90
6.2.3	Setting the Place Property	91
6.2.4	Setting the EquipmentIDTemplate Property	91
6.3	Deleting an Object or Preset from the Configuration Tree.....	92
6.4	Use of the Refresh Command.....	92
6.5	Editing an Object or Preset Properties in the Configuration Tree	93
7	Configuring FSS Equipment.....	94
7.1	First Step for FSS: Create the Subsystems	94
7.2	Adding a Rack or Chassis to the FSS Configuration.....	95
7.3	Adding an LM to a Chassis	95
7.3.1	Physical Significance of SubsysID and LMNumber.....	95
7.3.2	Setting the Logical Identification Properties of the LM.....	96
7.4	Adding an I/O Module to a Chassis.....	97
7.5	Hardware/Software Signal Interfaces	99
7.6	Platform Interface Controllers for all Modules	99
7.7	Configuring Links Between OCM and LM Optical Ports.....	102
7.8	LM Ethernet adapters (for FSS-MATS Interfaces)	106
8	Configuring MATS Equipment	107
8.1	Services Used in a Workstation.....	107
8.2	Adding a Rack to the Project Configuration.....	109
8.3	Adding a Workstation to a Rack.....	109
8.4	Adding the Required Services to a Workstation	109
8.5	Configuring FSS and MATS Communications.....	110
8.5.1	Configuration Requirements	110
8.5.2	Configuring a Simple MATS/FSS Interface	111
8.6	Possible Architectures	123
8.7	Ethernet Adapter Address Conventions	123
8.8	LM Ethernet Adapter Properties.....	124
8.9	TuningClient Properties Configuring	126
8.9.1	Security Property Configuration	126
8.9.2	Filters Property Configuration	127
9	Editing Application Signals.....	139
9.1	Signal Concepts	139
9.2	Committed vs Uncommitted (i.e. Pending) Changes	141

9.3	Available Editing Operations	143
9.3.1	Creating I/O Signals from Presets	144
9.3.2	Creating Internal Application Signals From AppSignals Tab	146
9.4	Editing Application Signals	149
9.5	Deleting Application Signals	150
9.6	Undoing Changes	151
9.7	Checking-In Changes	152
9.8	Contention with Multiple Users	153
9.9	Refreshing the Signal List	154
9.10	Types of Application Signals	154
9.11	Properties of Application Signals	155
9.11.1	Properties of AppSignals – Subset 1 – Identification.....	156
9.11.2	Properties of AppSignals – Subset 2 – Signal Type.....	157
9.11.3	Properties of AppSignals – Subset 3 – Data Format	158
9.11.4	Properties of AppSignals – Subset 4 – Signal Processing.....	158
9.11.5	Properties of AppSignals – Subset 5 – Electric Parameters	164
9.11.6	Properties of AppSignals – Subset 6 – Online Monitoring System	165
9.11.7	Properties of AppSignals – Subset 7 – Tuning.....	166
9.11.8	Properties of AppSignals – Subset 8 – Expert Properties	167
9.12	The Filtering Function for Application Signals.....	168
9.13	View history of signals changes.....	169
9.14	Cloning of signals	170
10	Function Block Libraries (AFBL and UFBL)	171
10.1	The Certified AFBL.....	171
10.1.1	AFBL Overview	171
10.1.2	Version Level of AFBL Blocks.....	172
10.2	User Function Blocks (UFBs)	173
10.2.1	Creating a UFB.....	174
10.2.2	Editing UFBs	175
11	Editing Logic Schemas.....	177
11.1	General Concepts.....	177
11.2	Committed vs Uncommitted (Pending) Changes	179
11.3	Managing Schemas.....	179
11.3.1	Adding a Schema.....	181
11.3.2	Deleting a Schema.....	183
11.3.3	Viewing Schema Changesets	183
11.3.4	Checking-In/Out a Schema and Undoing Changes	184
11.3.5	Opening a Schema for Editing and Saving It	186
11.3.6	Cloning a Schema.....	188
11.3.7	Including/Excluding Schemas in the Build	188
11.3.8	Schema Joining.....	188
11.3.9	Comparing Different Versions of the Schema	189
11.4	Functional vs Non-functional Items on Schemas	190
11.4.1	Description of Non-functional Items.....	190
11.4.2	Using Non-functional Items	192
11.5	Editing Operations with Schema Logic Items	193
11.5.1	Adding and Deleting an Item	195
11.5.2	Zoom In / Zoom Out	198
11.5.3	Scrolling on the Schema.....	199
11.5.4	Selecting and De-Selecting Item(s).....	199

11.5.5	Moving an Item	199
11.5.6	Duplicating (Copying) Items	199
11.5.7	Editing Properties of an Item.....	199
11.6	Utility Functions Affecting Schema Items	202
11.6.1	Show/Hide Block Label Information	203
11.6.2	Front-to-Back Ordering of Items on the Schema	203
11.6.3	Sizing and Aligning Blocks on the Schema	204
11.6.4	Commenting / Uncommenting Items on a Schema.....	204
11.6.5	Locking / Unlocking Schema Items in Place	205
11.6.6	Using the Find and Replace Function on a Schema.....	205
12	Designing Application Logic	207
12.1	Using Input-Output Interface Blocks	208
12.1.1	INPUT Interface Block.....	209
12.1.2	OUTPUT Interface Block.....	211
12.1.3	IN/OUT Interface Block.....	212
12.1.4	Display Formatting of the Interface Blocks	213
12.2	Using Constants	215
12.3	Using AFBs	215
12.4	Extensible AFBs	218
12.5	Using UFBs	219
12.6	Using On-Schema Links.....	219
12.7	Using Optical Communications Links	220
12.7.1	Identifying the OCL to Configure	223
12.7.2	Configuring an OCL Transmitter	224
12.7.3	Configuring an OCL Receiver.....	224
12.8	Application Signals that are Tunable Online.....	225
12.9	Using Bus Types Editor.....	226
12.10	Using Loopbacks	228
13	Designing Monitor Schemas.....	230
13.1	Basic Displays Based on UAL Schemas	230
13.2	Custom Displays.....	231
14	Performing the Build	236
14.1	Performing a Build	236
14.2	Examining Build Errors and Warnings	237
14.3	Decoding Error/Warning Codes and Explanations.....	238
14.4	RPCT Outputs Files.....	239
15	Uploading UAL Configurations to the LMs	240
15.1	Pre-Requisites	240
15.2	Configuration Management.....	241
15.3	Cable Connections to the LM and File Types to Upload	241
15.4	Configuring the USB Port	242
15.5	Use of RPCT to Upload Configurations.....	248
15.5.1	RPCT Upload Screens and Functions	248
15.5.2	Uploading Files to the LM with RPCT	250
15.6	Use of MCONF to Upload Configurations.....	251
15.6.1	MCONF Screen Displays	251
15.6.2	MCONF Settings	253
15.6.3	Uploading Files to the LM with MCONF	253
16	Security	256

17 Product Forum	257
18 Revision History	258

Figures

Figure 1-1 Range of Configuration Using RPCT	13
Figure 2-1 Radiy FSC Chassis Showing Typical Modules	23
Figure 2-2 Hierarchy of Hardware in FSC-based Systems.....	24
Figure 2-3 RPCT Equipment Configuration Screen.....	25
Figure 2-4 FSC Capacity Expansion Using OCMs	26
Figure 2-5 RPCT Application Logic Schema Screen.....	28
Figure 2-6 Hardware and Signal Interfaces of an AI Channel.....	30
Figure 2-7 Monitoring and Tuning Extensions to FSS.....	31
Figure 2-8 RPCT Configuration of FSS and MATS	33
Figure 3-1 Configuring the Server.....	38
Figure 3-2 Defining a New Login.....	38
Figure 3-3 Defining a Login Role.....	39
Figure 3-4 Setting Up Remote Host Access	40
Figure 3-5 RPCT Installation Setup Wizard Dialogs (1,2).....	41
Figure 3-6 RPCT Installation Setup Wizard Dialogs (3,4).....	41
Figure 3-7 RPCT Installation Setup Wizard Dialogs (5,6).....	41
Figure 3-8 RPCT Maintenance Screen (7,8).....	42
Figure 3-9 Server Access Error Popup	42
Figure 3-10 Server Access Dialog	43
Figure 3-11 Main Areas of the RPCT Screen.....	45
Figure 3-12 Checking Out an Object.....	51
Figure 4-1 Projects Tab Panel Layout	52
Figure 4-2 Create New Project Dialog.....	54
Figure 4-3 Enter username and password Dialog.....	55
Figure 4-4 Database Version is Lower Than the Program Version Dialog.....	56
Figure 4-5 Database Version is Higher Than the Program Version Dialog	56
Figure 4-6 Clone Project Password Dialog.....	57
Figure 4-7 Clone Project Name Entering Dialog.....	58

Figure 4-8 Project-Deletion Dialog	58
Figure 4-9 Delete Project Password Dialog.....	59
Figure 4-10 Initial Project Users Dialog.....	60
Figure 4-11 New User Dialog.....	61
Figure 4-12 Updated Project Users Dialog.....	62
Figure 4-13 Project Properties Window	64
Figure 5-1 Logical Structure of an RPCT Project	67
Figure 5-2 Hierarchical Structures of FSS and MATS Configurations.....	68
Figure 5-3 Configuration of an FSC Chassis.....	70
Figure 5-4 Interconnections of FSS and MATS – Simplest Configuration.....	71
Figure 5-5 Interconnections of FSS and MATS – Redundant Configuration	72
Figure 5-6 Equipment Configuration Tab Display	73
Figure 5-7 Example of Preset Module	81
Figure 5-8 Preset Editing Display.....	82
Figure 5-9 Update From Preset Window	83
Figure 6-1 Context Menu of Equipment Tab.....	85
Figure 6-2 Adding an Object to the Structure.....	88
Figure 6-3 Adding a Preset Object to the Structure.....	88
Figure 6-4 Illustration of Essential Property Edits	89
Figure 7-1 Subsystems List Editor.....	94
Figure 7-2 Adding App Signals to a Module.....	97
Figure 7-3 Configuring an Optical Communications Link.....	103
Figure 8-1 Services in Workstation	106
Figure 8-2 Adding Services to a Workstation.....	109
Figure 8-3 Reference FSS/MATS Interface Diagram	111
Figure 8-4 LM Ethernet Adapter 1 Properties for Tuning Links.....	113
Figure 8-5 LM Ethernet Adapter 2 Properties for MATS Links	113
Figure 8-6 LM Ethernet Adapter 3 Properties for (Optional) MATS Links.....	114
Figure 8-7 Configuration Service Properties	115
Figure 8-8 Application Data Service Properties	115
Figure 8-9 Archive Service Properties.....	117
Figure 8-10 Monitor Properties	119

Figure 8-11 Tuning Service Properties	120
Figure 8-12 Tuning Client Properties	121
Figure 8-13 FSS-MATS Interconnections – Redundant Configuration	126
Figure 8-14 TuningClient Property Window	127
Figure 8-15 User List in Tuning Client.....	128
Figure 8-16 Filters Window	130
Figure 8-17 Default Tree Type Filter.....	135
Figure 8-18 Example of Tree Filter in Tuning Client.....	136
Figure 8-19 Example of Nested Custom Filters in Tuning Client	136
Figure 8-20 Signals Filters Sub-tab	137
Figure 9-1 Illustration of Making On-Schema Links Globally Available.....	139
Figure 9-2 Application Signals Display with Editor Open.....	141
Figure 9-3 Column Headers Option Window	142
Figure 9-4 Create Signals Dialog.....	146
Figure 9-5 Signal Properties Dialog for Analog Signal.....	146
Figure 9-6 Signal Properties Dialog for Discrete Signal	147
Figure 9-7 Signal Properties Dialog for Bus Signal	147
Figure 9-8 Example of the “Undo signal changes” Dialog.....	151
Figure 9-9 Example of the “Pending changes” Dialog.....	152
Figure 9-10 Example of Editing Screen for AppSignal Properties.....	155
Figure 9-11 Specific Properties Window.....	166
Figure 9-12 Example of an Application Signal Search	168
Figure 9-13 Signal History Window	168
Figure 10-1 Example of an AFB on a Logic Schema.....	171
Figure 10-2 AFBL Version.....	171
Figure 10-3 AFB Library Check Window	172
Figure 10-4 Creating a New UFB Schema	174
Figure 10-5 Setting Properties of a New UFB.....	174
Figure 11-1 Application Logic Schema List.....	177
Figure 11-2 Schema Context Menu	180
Figure 11-3 New Application Logic Schema Properties Dialog	181
Figure 11-4 New Schema Filename Error Dialog	181

Figure 11-5 Selection of Logic Schema Version to View	183
Figure 11-6 Display of a Logic Schema in its Tab	183
Figure 11-7 Schema File Check-in Justification Dialog.....	184
Figure 11-8 Schema File Operation Sub-Menu	186
Figure 11-9 Schema File Close Dialog.....	186
Figure 11-10 Property Dialog for a Schema	188
Figure 11-11 The Non-Functional Items	190
Figure 11-12 Descriptive Framing a Section of UAL on a Schema	191
Figure 11-13 Schema Item Editing Context Menu	192
Figure 11-14 Selection Trail for Adding an Item to a Logic Schema	195
Figure 11-15 Selection of AFB to Add to a Logic Schema.....	196
Figure 11-16 Tool Icons to Add Items to a Schema	197
Figure 11-17 Property Editing Operation Options.....	200
Figure 11-18 Example of a Property Edit Dialog for a Line Item.....	200
Figure 11-19 Block Property Edit Dialog.....	201
Figure 11-20 Example of a Block Label.....	202
Figure 11-21 Example of a Commented-out Block.....	203
Figure 11-22 Example of a Find and Replace Dialog.....	204
Figure 12-1 Functional Items for Logic Schemas.....	206
Figure 12-2 Illustration of Use of Interface Blocks	207
Figure 12-3 Setting the AppSignalIDs Property of an OUTPUT Block	210
Figure 12-4 Adding a New AppSignal for an OUTPUT Block.....	210
Figure 12-5 Display Defaults for INPUT, OUTPUT and IN/OUT Blocks	211
Figure 12-6 Display Properties for INPUT, OUTPUT and IN/OUT Blocks	212
Figure 12-7 Selecting and AFB	214
Figure 12-8 Inputs and Outputs of Blocks Showing Connecting Links	215
Figure 12-9 Internal Tuning Parameters of AFBs	215
Figure 12-10 External vs Internal Parameters of AFBs.....	216
Figure 12-11 Voter Block Properties	217
Figure 12-12 OCL Example – Chassis 1 Side	220
Figure 12-13 OCL Example – Chassis 2 Side	220
Figure 12-14 Bus Types Editor Window	224

Figure 12-15 Signal Editing Window	225
Figure 12-16 Example of Bus Composer and Bus Extractor.....	226
Figure 12-17 Example of Loopback Target and Loopback Source.....	226
Figure 13-1 UAL Schematic Showing AppSignals and Monitoring Properties.....	229
Figure 13-2 Resulting Monitor Display	229
Figure 13-3 Monitor Schema Design Items.....	230
Figure 13-4 Monitor Schema Example (1)	232
Figure 13-5 Monitor Schema Example (2)	232
Figure 13-6 Monitor Schema Example (3)	233
Figure 13-7 Resulting Monitor Schema.....	233
Figure 14-1 Build Log Including Files not Checked-in.....	235
Figure 15-1 Upload Cable Shown connected to an LM Port.....	239
Figure 15-2 Photograph of the LM Showing 4 UART Connectors.....	240
Figure 15-3 Device Manager Screen	241
Figure 15-4 Context Menu for FT232R USB UART	241
Figure 15-5 Update Driver Software Dialog for FT232R USB UART.....	242
Figure 15-6 Driver Location Dialog for FT232R USB UART.....	242
Figure 15-7 Folder Selection of FT232R USB UART driver.....	243
Figure 15-8 Update Driver Software Dialog	243
Figure 15-9 Successful Message for Driver Update Dialog	244
Figure 15-10 Context Menu for USB Serial Port	244
Figure 15-11 Update Driver Software Dialog for USB Serial Port.....	245
Figure 15-12 Driver Location Dialog for USB Serial Port.....	245
Figure 15-13 Successful Message for Driver Update Dialog	246
Figure 15-14 The Main Upload Screen in RPCT	246
Figure 15-15 Initial MCONF Screen	249
Figure 15-16 MCONF Settings Window	251
Figure 15-17 Initial Part of Upload Log	253
Figure 15-18 Final Part of Upload Log.....	253
Tables	
Table 1-1 Version Information	15
Table 1-2 Reference Standards	16

Table 1-3 Reference Documents.....	16
Table 3-1 Server Access settings dialog fields description	43
Table 3-2 Top-level menu.....	45
Table 3-3 High-level tabs.....	47
Table 3-4 RPCT Shortcuts	48
Table 4-1 Projects Tab Panel Content	52
Table 4-2 Project Creation Properties.....	54
Table 4-3 New User Login Parameters.....	61
Table 4-4 Project User Properties	63
Table 5-1 For FSS equipment	75
Table 5-2 For MATS equipment.....	76
Table 5-3 System Object Properties	77
Table 5-4 Rack Object Properties	78
Table 5-5 Chassis Object Properties	78
Table 5-6 Workstation Object Properties (MATS only).....	78
Table 5-7 Module Object Properties.....	79
Table 5-8 Controller Object Properties.....	79
Table 6-1 Major Operation Options for Equipment	85
Table 6-2 Place <i>Value</i> Constraints.....	90
Table 7-1 <i>SubsystemID</i> and <i>LMNumber</i> Constraints.....	95
Table 7-2 Basic PIC Output Signal Ports (all modules)	99
Table 7-3 Extra PIC Output Signal Ports (LM1-SF00, LM1-SF40-4PH, DOM, AOM only)	99
Table 7-4 Extra PIC Signal Ports (LM1-SF00, LM1-SF40-4PH only).....	99
Table 7-5 Extra PIC Signal Ports ((DIM, DOM, AIM-4PH, AOM-4PH, RIM-4PH, TIM-4PH, WAIM-4PH only).....	100
Table 7-6 Extra PIC Output Signal Ports (LM1-SF00, LM1-SF40-4PH, AOM, DOM, AOM-4PH only).....	100
Table 7-7 Extra PIC Signal Ports (LM1-SF40-4PH only).....	101
Table 7-8 Extra PIC Signal Ports (OCM only).....	101
Table 8-1 LM Ethernet IP Address Convention for 1st FSS/MATS Link	123
Table 8-2 LM Ethernet IP Address Convention for a 2nd FSS/MATS Link	123
Table 8-3 MATS WS Ethernet IP Address Convention	123

Table 8-4 LM Ethernet Adapter Properties	124
Table 8-5 Tree Filter Properties	130
Table 8-6 Tab Filter Properties	131
Table 8-7 Button Filter Properties	132
Table 8-8 Counter Filter Properties	133
Table 9-1 Add Application Signal Dialog Properties	148
Table 9-2 Properties of AppSignals – Subset 1 – Identification.....	156
Table 9-3 Properties of AppSignals – Subset 2 – Signal Type.....	156
Table 9-4 Properties of AppSignals – Subset 3 – Data Format(Analog).....	157
Table 9-5 Properties of AppSignals – Subset 3 – Data Format(Discrete).....	157
Table 9-6 Properties of AppSignals – Subset 4a – Signal Processing (AIM, AIFM)	158
Table 9-7 Properties of AppSignals – Subset 4a – Signal Processing (AIM-4PH, WAIM-4PH)	159
Table 9-8 Properties of AppSignals – Subset 4a – Signal Processing (RIM-4PH)	160
Table 9-9 Properties of AppSignals – Subset 4a – Signal Processing (TIM-4PH)	161
Table 9-10 Properties of AppSignals – Subset 4b – Signal Processing (AOM).....	162
Table 9-11 Properties of AppSignals – Subset 4b – Signal Processing (AOM-4PH)	163
Table 9-12 Properties of AppSignals – Subset 5 – Electric Parameters (AIM, AIM-4PH, TIM-4PH, WAIM-4PH, AIFM)	163
Table 9-13 Properties of AppSignals – Subset 5 – Electric Parameters (RIM-4PH)	164
Table 9-14 Properties of AppSignals – Subset 6 – Online Monitoring System	164
Table 9-15 Properties of AppSignals – Subset 7 – Tuning.....	165
Table 11-1 Application Logic Item – Editing Commands.....	194
Table 13-1 Monitor Schema Items	230
Table 15-1 LM Ports Used for Uploading Files	242