



FSC Tuning User Manual

RadICS

(Radiy FSC — FPGA-based Safety Controller)

Document D11.9

Version V4, Revision R1

(RPCT version **0.8.729**)

February 2020

CONFIDENTIAL INFORMATION

Contents

1	Introduction	5
1.1	Scope and Purpose of this Document	5
1.2	Applicability and Version Information	5
1.3	Reference Standards	6
1.4	Other Documents Referenced by this UAL Tuning User Manual	6
1.5	Definitions and Acronyms	6
1.6	Notation in this UM:	8
1.7	Bullets:	8
2	Certification and Management of Functional Safety	9
3	Configuring the UAL to Provide for Tuning	10
3.1	Creating Tunable Application Signals	10
3.2	Using Tunable Application Signals in the UAL	12
3.3	Two Possible Applications of Tuning	13
4	How the Tuning Works	15
4.1	The Tuning Service and the Tuning Client	15
4.2	Data Pre-Requisites to Tuning	16
4.3	FSC State Pre-Requisites to Tuning	16
4.4	Tuning Values Processing within the LM	17
4.5	Tuning Internetworking between ATS and the LM	18
4.6	The Lifecycle of Tuning Values	20
4.7	Tuning Protection	21
5	LM Entry to, Exit from Tuning Mode	23
5.1	Entry into TUNING Mode	23
5.2	Normal Exit from TUNING Mode	23
5.3	Faulty Tuning Values	24
5.4	Consequences of Faulty Tuning Values	24
6	Configuration of the Tuning System	26
6.1	Configuring the Tuning Service and the Tuning Client	26
6.2	Preparing a Stand-Alone Application Tuning Station	28
6.3	MATS Services Command Line Arguments	28
6.3.1	Configuration Service Command Line Arguments	29
6.3.2	Tuning Service Command Line Arguments	31
6.4	Tuning Client Start-Up	32
7	Using the Tuning Client	36
7.1	Main Tuning Client Screen	36
7.2	Logging In to the Tuning Client	44
7.3	Operation Confirmation in the Tuning Client	46
7.4	Performing Basic Tuning Operations	46
7.5	Extra Tuning Steps When a Limit is Violated or SOR is set	53
7.6	Filtering Long Lists of Tunable Signals	57
8	Advanced Topics	59
8.1	Tunable Signal Detail Status	59
8.2	Creating Custom Tuning Filters	61
8.3	Using Filters to Group Setting of Tuning Values	70
8.4	Using Tuning Schemas	74
9	Supplementary Screens	78
9.1	Tuning Data Sources Screen	78
9.2	Connection Statistics Screen	79
9.3	Settings Screen	80

9.4	Application Log Screen	81
9.5	Signals Log Screen	82
9.6	About Screen	83
10	Cyber Security	84
11	Product Forum	85

Figures

Figure 3-1	Creating an Internal AppSignal	11
Figure 3-2	Properties to Edit for Tunable AppSignals	12
Figure 3-3	Summary View of Tunable AppSignals	12
Figure 3-4	Partial View of UAL with Tunable AppSignals	13
Figure 3-5	Application of Tuning: Single Tunable Block	14
Figure 3-6	Application of Tuning: Setting of Protected Trip Setpoint	14
Figure 4-1	Data Flow Between LM and MATS	15
Figure 4-2	Use of 2 Sets of Tuning Values	17
Figure 4-3	ATS-LM interaction diagram (ATS sends READ command)	18
Figure 4-4	ATS-LM interaction diagram (ATS sends WRITE command)	19
Figure 4-5	ATS-LM interaction diagram (ATS sends APPLY command)	19
Figure 4-6	Lifecycle of Tuning Values	21
Figure 6-1	Configuration Service Configuration in RPCT	26
Figure 6-2	Tuning Service Configuration in RPCT	27
Figure 6-3	Example of the Tuning Client Configuration in RPCT	27
Figure 6-4	Configuration Service Batch File	31
Figure 6-5	Tuning Service Batch File	32
Figure 6-6	Windows Local Services Screen	33
Figure 6-7	Configuration Service Console	34
Figure 6-8	Tuning Service Console	34
Figure 7-1	Main TC Screen at Startup	36
Figure 7-2	Possible View of the Main TC Screen at Startup	36
Figure 7-3	LM Status Reporting	40
Figure 7-4	Logging in to the ATS	45
Figure 7-5	User Account and Time Displaying when User Log In	45
Figure 7-6	User Account and Time Displaying when User Log Out	45
Figure 7-7	Tuning Process	47
Figure 7-8	LM Control Activation	48
Figure 7-9	Activate Control Confirmation	48
Figure 7-10	Active State Displaying	49
Figure 7-11	Signal Value Entering Dialogs	50
Figure 7-12	Set Values Displaying	50
Figure 7-13	Write Command Confirmation	51
Figure 7-14	Written Values Displaying	52
Figure 7-15	Apply Confirmation	52
Figure 7-16	Applied Values Displaying	53
Figure 7-17	Rejection of the Out of Limits Value by ATS	54
Figure 7-18	Alert Message	55
Figure 7-19	SetSOR Indication	57
Figure 7-20	Signals Filtering	58
Figure 8-1	Tunable AppSignals Detail Status	60
Figure 8-2	Filters Dialog Start Screen	62

Figure 8-3 The New Tree Filter Properties	63
Figure 8-4 The “Tree” Type Filter Usage	65
Figure 8-5 The “Tree” Type Filter Usage (the second example)	66
Figure 8-6 Use of Nesting Filters	68
Figure 8-7 Signals Selection Sub-tab	69
Figure 8-8 Filtering Signal List	70
Figure 8-9 Setting of the Different Value Properties for the Same Signals	72
Figure 8-10 Setting of Tuning Values with Custom Filter Signals Preset	72
Figure 8-11 Tab Filter Columns Properties.....	73
Figure 8-12 Multi-channel Signals in the Tab Filter.....	74
Figure 8-13 Tuning Schema Design Items.....	74
Figure 8-14 Tuning Schema Example (1)	76
Figure 8-15 Tuning Schema Example (2)	76
Figure 8-16 Tuning Schema Example (3)	77
Figure 8-17 Resulting Tuning Schema.....	77
Figure 9-1 Tuning Sources Screen	78
Figure 9-2 Detailed LM Properties Display	79
Figure 9-3 Connection Statistics Window.....	80
Figure 9-4 The Tuning Client Settings Screen.....	80
Figure 9-5 Tuning Client Application Log Screen.....	81
Figure 9-6 Tuning Client Signals Log Screen.....	82

Tables

Table 1-1 Version Information.....	6
Table 1-2 Off-Line Software Version Information	6
Table 1-3 Reference standards	6
Table 1-4 Reference documents	6
Table 6-1 Configuration Service Command Line Arguments	29
Table 6-2 Tuning Service Command Line Arguments	31
Table 7-1 Main Menu Bar Functions in Region 1.....	38
Table 8-1 Tree Filter Properties	63